
5. MAIN Electrical Parts List

Parts Code	Design LOC	Description
0404-001250	D6001	DIODE-SCHOTTKY
0404-001863	ZD6006	DIODE-SCHOTTKY
0406-001808	D6002	DIODE-TVS
0406-001829	ZD1000	DIODE-TVS
0406-001873	ZD9000,ZD9001	DIODE-TVS
0601-003899	LED6000	LED
0903-002270	U8006	IC
1001-002065	U1007,U1008,U3000	IC
1001-002098	U2000	IC
1001-002114	U8001	IC
1108-000688	UME5000	MEMORY
1201-003869	U3008	IC
1201-004219	U1003,U2005	IC
1201-004239	U7000,U7001	IC
1201-004241	U1004	IC
1201-004273	PAM2000	IC
1203-008251	U6007	IC
1203-008395	U8002,U8004	IC
1203-008864	U8008	IC
1203-008867	U3004,U8011	IC
1203-008955	U8003	IC
1203-009220	U8005	IC
1203-009234	U6005	IC
1203-009240	U2003	IC
1203-009245	U9000	IC
1203-009246	U6003	IC
1203-009320	U6001	IC
1203-009442	U8007	IC
1203-009470	U6000	IC
1203-009510	U6002	IC
1205-006278	U3007	IC
1205-006283	U7006	IC
1205-006363	U3001	IC
1205-006397	U2001	IC
1205-006409	UCP400	IC
1209-002513	U7005	IC
1209-002578	U7004	IC
1209-002711	U7003	IC

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

1404-001724	TH2000,TH3000,TH4000	THERMISTOR
1404-001724	TH6000,V5000	THERMISTOR
2007-000141	R3003,R4015,R4016	R-CHIP
2007-003015	R9004,R9008	R-CHIP
2007-007107	R6028	R-CHIP
2007-007142	R8005	R-CHIP
2007-007311	R6018	R-CHIP
2007-007334	R6016	R-CHIP
2007-007741	R6015,R6017	R-CHIP
2007-008052	R9001	R-CHIP
2007-008055	R6001,R6004,R6005	R-CHIP
2007-008055	R7013,R9000	R-CHIP
2007-008056	R1003,R1004	R-CHIP
2007-008211	R4037	R-CHIP
2007-008263	R4044	R-CHIP
2007-008419	R4001,R4003,R4007	R-CHIP
2007-008419	R4009,R4017,R4018	R-CHIP
2007-008419	R4026,R4028,R4036	R-CHIP
2007-008419	R4050,R6025,R6026	R-CHIP
2007-008419	R6027,R6029,R7017	R-CHIP
2007-008419	R8006,R8007,R8009	R-CHIP
2007-008419	R8010	R-CHIP
2007-008486	R6006,R6007,R6009	R-CHIP
2007-008486	R6010,R6012	R-CHIP
2007-008516	R6019	R-CHIP
2007-008531	R6031,R8008	R-CHIP
2007-008542	R6000,R6013,R7018	R-CHIP
2007-008542	R7019	R-CHIP
2007-008587	R7002	R-CHIP
2007-008766	R4040,R4041	R-CHIP
2007-008785	R1002	R-CHIP
2007-008800	R7012,R7014	R-CHIP
2007-008806	R1000,R1007,R8011	R-CHIP
2007-009111	R7009	R-CHIP
2007-009157	R5044	R-CHIP
2007-009171	R3000	R-CHIP
2007-009352	R7016,R7020,R7021	R-CHIP
2007-009352	R7022	R-CHIP
2007-009361	R1001,R1005	R-CHIP

5. MAIN Electrical Parts List

2007-009408	R3001,R3002,R7000	R-CHIP
2007-009801	R4046,R4047	R-CHIP
2007-009805	R1006,R2000	R-CHIP
2007-009838	R6030	R-CHIP
2007-009920	R4011,R5000,R5001	R-CHIP
2007-011591	R4000,R4002,R4004	R-CHIP
2007-011591	R4005,R4008,R4010	R-CHIP
2007-011591	R4012,R4013,R4014	R-CHIP
2007-011591	R4019,R4020,R4021	R-CHIP
2007-011591	R4022,R4023,R4024	R-CHIP
2007-011591	R4025,R4027,R4042	R-CHIP
2007-011591	R4043	R-CHIP
2007-012197	R6014	R-CHIP
2203-000233	C3053,C3056,C3059	C-CERAMIC,CHIP
2203-000233	C6110	C-CERAMIC,CHIP
2203-005344	C6010	C-CERAMIC,CHIP
2203-005450	C3057	C-CERAMIC,CHIP
2203-005682	C2075,C7008,L2016	C-CERAMIC,CHIP
2203-005729	C7007	C-CERAMIC,CHIP
2203-005732	C7006,C7009	C-CERAMIC,CHIP
2203-005734	C7021	C-CERAMIC,CHIP
2203-005736	C1013,C1022,C1023	C-CERAMIC,CHIP
2203-005736	C1033,C1055,C1062	C-CERAMIC,CHIP
2203-005736	C1099,C1102,C1105	C-CERAMIC,CHIP
2203-005736	C2000,C2036,C2065	C-CERAMIC,CHIP
2203-005736	C2071,C2076,C2110	C-CERAMIC,CHIP
2203-005736	C2114,C2119,C2121	C-CERAMIC,CHIP
2203-005736	C2122,C2124,C2130	C-CERAMIC,CHIP
2203-005736	C3007,C3019,C3033	C-CERAMIC,CHIP
2203-005736	C3062,C3063,C3067	C-CERAMIC,CHIP
2203-005736	C3068,C6042,C7022	C-CERAMIC,CHIP
2203-005736	C7023,C9022,L1015	C-CERAMIC,CHIP
2203-005736	L2037,U9002	C-CERAMIC,CHIP
2203-005777	C1026,C1027,C1036	C-CERAMIC,CHIP
2203-005777	C1094,L1080,L2012	C-CERAMIC,CHIP
2203-005777	L2025,L2031	C-CERAMIC,CHIP
2203-005779	C8004,C8012,C8016	C-CERAMIC,CHIP
2203-005779	C8020,C8058	C-CERAMIC,CHIP
2203-005789	C1001,C1029,C1030	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-005789	C1082,C2101,L2006	C-CERAMIC,CHIP
2203-005789	L2007	C-CERAMIC,CHIP
2203-005792	C1017,C1044,C1046	C-CERAMIC,CHIP
2203-005792	L1040	C-CERAMIC,CHIP
2203-005806	C2079,C2113	C-CERAMIC,CHIP
2203-006048	C7043	C-CERAMIC,CHIP
2203-006120	C9020,C9021	C-CERAMIC,CHIP
2203-006305	C1101,C2087,C3003	C-CERAMIC,CHIP
2203-006305	C3035,L1030	C-CERAMIC,CHIP
2203-006379	C7054	C-CERAMIC,CHIP
2203-006400	C3048,C3052,C3060	C-CERAMIC,CHIP
2203-006400	C6032	C-CERAMIC,CHIP
2203-006410	C1088,L1055	C-CERAMIC,CHIP
2203-006423	C1002,C1003,C1021	C-CERAMIC,CHIP
2203-006423	C1060,C2003,C2004	C-CERAMIC,CHIP
2203-006423	C2006,C2007,C2008	C-CERAMIC,CHIP
2203-006423	C2009,C2010,C2011	C-CERAMIC,CHIP
2203-006423	C2012,C2013,C2014	C-CERAMIC,CHIP
2203-006423	C2015,C2016,C2017	C-CERAMIC,CHIP
2203-006423	C2019,C2020,C2022	C-CERAMIC,CHIP
2203-006423	C2023,C2024,C2025	C-CERAMIC,CHIP
2203-006423	C2026,C2027,C2028	C-CERAMIC,CHIP
2203-006423	C2029,C2030,C2064	C-CERAMIC,CHIP
2203-006423	C2107,C2108,C2112	C-CERAMIC,CHIP
2203-006423	C3004,C3065,C4005	C-CERAMIC,CHIP
2203-006423	C5165,C6004,C6036	C-CERAMIC,CHIP
2203-006423	C6076,C7001,C7003	C-CERAMIC,CHIP
2203-006423	C7011,C7027,C7032	C-CERAMIC,CHIP
2203-006423	C7033,C7034,C7046	C-CERAMIC,CHIP
2203-006423	C7052,C7053,C8043	C-CERAMIC,CHIP
2203-006423	C8059	C-CERAMIC,CHIP
2203-006556	C1059	C-CERAMIC,CHIP
2203-006604	C3015,C3034	C-CERAMIC,CHIP
2203-006665	C1051	C-CERAMIC,CHIP
2203-006674	C1000,C1004,C1104	C-CERAMIC,CHIP
2203-006674	C2033,C2129,L1018	C-CERAMIC,CHIP
2203-006707	C3002	C-CERAMIC,CHIP
2203-006839	C1061,C5056,C5144	C-CERAMIC,CHIP
2203-006839	C6014,C6120	C-CERAMIC,CHIP

5. MAIN Electrical Parts List

2203-006844	C3032	C-CERAMIC,CHIP
2203-006896	C6041	C-CERAMIC,CHIP
2203-006979	C3013,C3018,C3020	C-CERAMIC,CHIP
2203-006979	C3021,C3022,C3028	C-CERAMIC,CHIP
2203-006979	C3029	C-CERAMIC,CHIP
2203-007194	C1006,C1020,C1031	C-CERAMIC,CHIP
2203-007210	C7010	C-CERAMIC,CHIP
2203-007317	C2002,C2005,C2018	C-CERAMIC,CHIP
2203-007317	C2031,C3023,C3026	C-CERAMIC,CHIP
2203-007317	C3031,C3042,C3043	C-CERAMIC,CHIP
2203-007317	C5074,C5078,C5094	C-CERAMIC,CHIP
2203-007317	C5118,C5126,C5166	C-CERAMIC,CHIP
2203-007317	C6043,C6044,C6053	C-CERAMIC,CHIP
2203-007317	C6057,C6058,C6065	C-CERAMIC,CHIP
2203-007317	C6105,C6107,C6108	C-CERAMIC,CHIP
2203-007317	C6109,C7002,C7004	C-CERAMIC,CHIP
2203-007317	C7028,C7042,C7048	C-CERAMIC,CHIP
2203-007317	C8001,C8003,C8018	C-CERAMIC,CHIP
2203-007317	C8026,C8039,C8040	C-CERAMIC,CHIP
2203-007317	C8042,C8045,C8062	C-CERAMIC,CHIP
2203-007317	C9027	C-CERAMIC,CHIP
2203-007391	C2118,C2120,C3030	C-CERAMIC,CHIP
2203-007391	C7017,C7018,C7025	C-CERAMIC,CHIP
2203-007393	C6001,C6019	C-CERAMIC,CHIP
2203-007425	C6005	C-CERAMIC,CHIP
2203-007456	C6069	C-CERAMIC,CHIP
2203-007486	C6064	C-CERAMIC,CHIP
2203-007621	C2039,C7044,C7045	C-CERAMIC,CHIP
2203-007621	C8027,C8049	C-CERAMIC,CHIP
2203-007781	C6115,C6117	C-CERAMIC,CHIP
2203-007796	C2050,C3016,C3017	C-CERAMIC,CHIP
2203-007796	C3025,C3027,C3038	C-CERAMIC,CHIP
2203-007796	C3049,C3050,C3051	C-CERAMIC,CHIP
2203-007796	C5000,C5001,C5002	C-CERAMIC,CHIP
2203-007796	C5010,C5011,C5012	C-CERAMIC,CHIP
2203-007796	C5014,C5015,C5018	C-CERAMIC,CHIP
2203-007796	C5023,C5024,C5025	C-CERAMIC,CHIP
2203-007796	C5026,C5027,C5028	C-CERAMIC,CHIP
2203-007796	C5029,C5030,C5031	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-007796	C5032,C5033,C5034	C-CERAMIC,CHIP
2203-007796	C5035,C5037,C5039	C-CERAMIC,CHIP
2203-007796	C5040,C5041,C5043	C-CERAMIC,CHIP
2203-007796	C5044,C5047,C5048	C-CERAMIC,CHIP
2203-007796	C5049,C5057,C5059	C-CERAMIC,CHIP
2203-007796	C5068,C5069,C5070	C-CERAMIC,CHIP
2203-007796	C5072,C5073,C5080	C-CERAMIC,CHIP
2203-007796	C5081,C5082,C5085	C-CERAMIC,CHIP
2203-007796	C5087,C5088,C5089	C-CERAMIC,CHIP
2203-007796	C5090,C5093,C5095	C-CERAMIC,CHIP
2203-007796	C5096,C5099,C5100	C-CERAMIC,CHIP
2203-007796	C5101,C5102,C5103	C-CERAMIC,CHIP
2203-007796	C5104,C5105,C5106	C-CERAMIC,CHIP
2203-007796	C5115,C5116,C5119	C-CERAMIC,CHIP
2203-007796	C5120,C5121,C5123	C-CERAMIC,CHIP
2203-007796	C5124,C5125,C5127	C-CERAMIC,CHIP
2203-007796	C5128,C5129,C5131	C-CERAMIC,CHIP
2203-007796	C5133,C5136,C5137	C-CERAMIC,CHIP
2203-007796	C5138,C5141,C5142	C-CERAMIC,CHIP
2203-007796	C5143,C5155,C5156	C-CERAMIC,CHIP
2203-007796	C5163,C5164,C5167	C-CERAMIC,CHIP
2203-007796	C6017,C6028,C6039	C-CERAMIC,CHIP
2203-007796	C6047,C6050,C6056	C-CERAMIC,CHIP
2203-007796	C6059,C6061,C6098	C-CERAMIC,CHIP
2203-007796	C6099,C6102,C6103	C-CERAMIC,CHIP
2203-007796	C6104,C6106,C7005	C-CERAMIC,CHIP
2203-007796	C7016,C7029,C7035	C-CERAMIC,CHIP
2203-007796	C8002,C8011,C8014	C-CERAMIC,CHIP
2203-007796	C8015,C8019,C8021	C-CERAMIC,CHIP
2203-007796	C8022,C8025,C8029	C-CERAMIC,CHIP
2203-007796	C8031,C8032,C8033	C-CERAMIC,CHIP
2203-007796	C8038,C8051,C8055	C-CERAMIC,CHIP
2203-007796	C8061	C-CERAMIC,CHIP
2203-008095	C1009,C1028	C-CERAMIC,CHIP
2203-008097	C6111,C7012,C7031	C-CERAMIC,CHIP
2203-008242	C3014,C5097,C5098	C-CERAMIC,CHIP
2203-008242	C6000,C6045,C6046	C-CERAMIC,CHIP
2203-008242	C6051,C6052,C6100	C-CERAMIC,CHIP
2203-008242	C6101,C8005,C8006	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-008242	C8037	C-CERAMIC,CHIP
2203-008243	C6040	C-CERAMIC,CHIP
2203-008394	C1010	C-CERAMIC,CHIP
2203-008466	C6091,C6092,C6097	C-CERAMIC,CHIP
2203-008466	C9012,C9018	C-CERAMIC,CHIP
2203-008572	C6007,C6113,C6114	C-CERAMIC,CHIP
2203-008572	C7013,C7014,C7015	C-CERAMIC,CHIP
2203-008572	C7036,C7037,C7038	C-CERAMIC,CHIP
2203-008749	C6078	C-CERAMIC,CHIP
2203-008860	C1053,C1056,C2073	C-CERAMIC,CHIP
2203-008860	C2074,C3037,C3047	C-CERAMIC,CHIP
2203-008860	C6002,C6006,C6011	C-CERAMIC,CHIP
2203-008860	C6013,C6015,C6021	C-CERAMIC,CHIP
2203-008860	C6023,C6034,C6035	C-CERAMIC,CHIP
2203-008860	C6037,C6067,C6070	C-CERAMIC,CHIP
2203-008860	C6074,C6075,C6077	C-CERAMIC,CHIP
2203-008860	C6079,C6080,C6082	C-CERAMIC,CHIP
2203-008860	C6086,C6090,C6093	C-CERAMIC,CHIP
2203-008860	C7024,C7026,C7047	C-CERAMIC,CHIP
2203-008860	C7051,C8028,C8030	C-CERAMIC,CHIP
2203-008860	C8050,C8054,C8060	C-CERAMIC,CHIP
2203-008876	C1054,C2052,C2053	C-CERAMIC,CHIP
2203-008876	C6025,C8008,C8044	C-CERAMIC,CHIP
2203-008876	C8046,C8047,C8048	C-CERAMIC,CHIP
2203-009167	C3054,C3058	C-CERAMIC,CHIP
2203-009584	C7019,C7020,C7039	C-CERAMIC,CHIP
2203-009584	C7040	C-CERAMIC,CHIP
2203-009618	C8034,C9002,C9016	C-CERAMIC,CHIP
2203-009618	C9017	C-CERAMIC,CHIP
2203-009733	C2051,C3024,C5004	C-CERAMIC,CHIP
2203-009733	C5005,C5006,C5007	C-CERAMIC,CHIP
2203-009733	C5045,C5046,C5075	C-CERAMIC,CHIP
2203-009733	C5077,C5150,C5152	C-CERAMIC,CHIP
2203-009733	C5153,C6008,C6009	C-CERAMIC,CHIP
2203-009733	C6016,C6018,C6027	C-CERAMIC,CHIP
2203-009733	C6031,C6033,C6038	C-CERAMIC,CHIP
2203-009733	C6048,C6049,C6068	C-CERAMIC,CHIP
2203-009733	C6071,C6072,C6073	C-CERAMIC,CHIP
2203-009733	C6081,C6083,C6084	C-CERAMIC,CHIP

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

2203-009733	C6085,C6087,C6088	C-CERAMIC,CHIP
2203-009733	C6095,C6096,C6119	C-CERAMIC,CHIP
2203-009733	C7000,C7030,C8010	C-CERAMIC,CHIP
2203-009733	C8013,C8017,C8023	C-CERAMIC,CHIP
2203-009733	C8035,C8036,C8067	C-CERAMIC,CHIP
2203-009733	C8068,C9003,C9004	C-CERAMIC,CHIP
2203-009733	C9005,C9006,C9007	C-CERAMIC,CHIP
2203-009733	C9008,C9009,C9013	C-CERAMIC,CHIP
2203-009733	C9014,C9015	C-CERAMIC,CHIP
2203-009875	C9019	C-CERAMIC,CHIP
2203-010085	C5008,C5009,C5051	C-CERAMIC,CHIP
2203-010085	C5052,C5053,C5054	C-CERAMIC,CHIP
2203-010085	C5062,C5076,C5145	C-CERAMIC,CHIP
2203-010085	C5146,C5147,C5148	C-CERAMIC,CHIP
2203-010085	C5149,C5151,C6024	C-CERAMIC,CHIP
2203-010085	C6030	C-CERAMIC,CHIP
2703-002858	C2089	C-CERAMIC,CHIP
2703-002959	L2001,L2010,R8000	INDUCTOR-SMD
2703-002959	R8001,R8002,R8003	INDUCTOR-SMD
2703-002959	R8004	INDUCTOR-SMD
2703-002961	L1010	INDUCTOR-SMD
2703-003004	L2053	INDUCTOR-SMD
2703-003970	L1017	INDUCTOR-SMD
2703-004000	C1016,L1029	INDUCTOR-SMD
2703-004001	C2109	INDUCTOR-SMD
2703-004012	C1066,L1028,L1035	INDUCTOR-SMD
2703-004012	L1061	INDUCTOR-SMD
2703-004013	C1024,C2105,L1043	INDUCTOR-SMD
2703-004013	L2045,L3000	INDUCTOR-SMD
2703-004014	L3001,L3022	INDUCTOR-SMD
2703-004018	L2000	INDUCTOR-SMD
2703-004030	C1007,C1014,C2040	INDUCTOR-SMD
2703-004030	L2005	INDUCTOR-SMD
2703-004032	C2106	INDUCTOR-SMD
2703-004033	L1083,L2008	INDUCTOR-SMD
2703-004034	C1025,C2066,C3061	INDUCTOR-SMD
2703-004034	L1012,L1038	INDUCTOR-SMD
2703-004035	C1038,L1037	INDUCTOR-SMD
2703-004036	C2001	INDUCTOR-SMD

5. MAIN Electrical Parts List

2703-004037	C1058,C2102,L1003	INDUCTOR-SMD
2703-004037	L1026,L1031,L1034	INDUCTOR-SMD
2703-004037	L1036,L2002,L2035	INDUCTOR-SMD
2703-004038	L2044,L2049	INDUCTOR-SMD
2703-004286	C2091,L1001,L2015	INDUCTOR-SMD
2703-004287	L1005,L1023,L1051	INDUCTOR-SMD
2703-004287	L1053,L3021	INDUCTOR-SMD
2703-004290	L2026,L2029	INDUCTOR-SMD
2703-004299	C2032	INDUCTOR-SMD
2703-004300	C2077	INDUCTOR-SMD
2703-004301	C2044,L2014	INDUCTOR-SMD
2703-004328	L1006,L1016,L1046	INDUCTOR-SMD
2703-004362	L2004	INDUCTOR-SMD
2703-004366	C1064,L1008,L1009	INDUCTOR-SMD
2703-004366	L1048,L1054	INDUCTOR-SMD
2703-004367	C2043,C3000	INDUCTOR-SMD
2703-004368	L1011	INDUCTOR-SMD
2703-004371	C1005,L1002,L1014	INDUCTOR-SMD
2703-004371	L3019	INDUCTOR-SMD
2703-004764	L1079,L2013	INDUCTOR-SMD
2703-004853	L3011,L6014,L6015	INDUCTOR-SMD
2703-004853	L6017	INDUCTOR-SMD
2703-004862	L1004,L1024	INDUCTOR-SMD
2703-005058	L8005	INDUCTOR-SMD
2703-005066	L2011	INDUCTOR-SMD
2703-005085	L1057	INDUCTOR-SMD
2703-005201	L6000,L6002,L6003	INDUCTOR-SMD
2703-005201	L6005,L6007,L6008	INDUCTOR-SMD
2703-005201	L6009,L6010,L6011	INDUCTOR-SMD
2703-005201	L6012,L6013,L6016	INDUCTOR-SMD
2703-005201	L6018	INDUCTOR-SMD
2703-005233	L7008,L7009	INDUCTOR-SMD
2703-005295	C1015	INDUCTOR-SMD
2703-005430	L9002	INDUCTOR-SMD
2703-005505	L7002,L7010	INDUCTOR-SMD
2703-005555	L3015,L3016	INDUCTOR-SMD
2703-005718	L1025	INDUCTOR-SMD
2703-005772	L9001	INDUCTOR-SMD
2703-005806	L9004	INDUCTOR-SMD

5. MAIN Electrical Parts List

2703-005838	L6001,L6004	INDUCTOR-SMD
2801-005512	OSC6000	INDUCTOR-SMD
2901-001635	F9000	CRYSTAL-UNIT
2903-001576	F3000	FILTER-EMI
2904-002366	F1001,F1008	FILTER-CERAMIC
2904-002405	F2006	FILTER-SAW
2904-002417	F3003	FILTER-SAW
2904-002432	F2000	FILTER-SAW
2910-000417	F1006	FILTER-SAW
2911-000454	U2009	FILTER
2911-000474	U1000	FILTER
2911-000487	U2008	FILTER
2911-000495	U2007	FILTER
3003-001256	MIC7000	FILTER
3301-001534	L7006,L7007	MIC-CONDENSOR
3301-001885	L7005	CORE-FERRITE
3301-002122	L7014,L7015	CORE-FERRITE
3301-002223	L8000,L8001,L8002	CORE-FERRITE
3301-002223	L8003,L8004	CORE-FERRITE
3301-002235	L7003	CORE-FERRITE
3301-002237	L1000,L1065,L2003	CORE-FERRITE
3301-002237	L2038,L7004	CORE-FERRITE
3301-002238	L3010,L3018	CORE-FERRITE
3301-002312	L9000,L9003,L9005	CORE-FERRITE
3301-002331	L6006	CORE-FERRITE
3301-002356	L7011,L7013	CORE-FERRITE
3705-001937	RFC1000,RFS1001	CORE-FERRITE
3709-001892	CN7000	CONNECTOR-COAXIAL
3710-002856	SOC8002	CONNECTOR-CARD
3710-003874	SOC8001,SOC8004	CONNECTOR-SOCKET
3710-004008	SOC6000	CONNECTOR-SOCKET
3710-004027	SOC8000,SOC8003	CONNECTOR-SOCKET
3710-004501	SOC9000	CONNECTOR-SOCKET
3712-001604	ANT1000,ANT1002	CONNECTOR-SOCKET
3712-001604	ANT3000,ANT3002	CONNECTOR
3712-001626	ANT6002,ANT6003	CONNECTOR
3712-001626	ANT6004,ANT6005	CONNECTOR
3712-001626	ANT6006	CONNECTOR
3712-001633	ANT3008,ANT3009	CONNECTOR

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.

5. MAIN Electrical Parts List

3712-001633	ANT6000,ANT6001	CONNECTOR
3712-001633	ANT7000,ANT7001	CONNECTOR
3712-001731	ANT2000,ANT2001	CONNECTOR
3712-001731	ANT2002,ANT2003	CONNECTOR
3712-001731	ANT2004	CONNECTOR
3712-001969	ANT1001	CONNECTOR
3712-001976	ANT8000	CONNECTOR
4709-002412	COUP1000	CONNECTOR
4709-002761	U1002	RF-MODULE
GH02-22405A	SC9001SP	TAPE CONDUCTIVE-NANO TIM-AP
GH63-19463A	SC9002	-
GH63-19466A	SC9004	-
GH98-46346A	SC9001	-
GH98-46400A	SC9003	-

[SM-A525M]

Parts Code	Design LOC	Description
1108-000677	UME5000	MEMORY
2203-005736	C1076	C-CERAMIC,CHIP
2203-005777	C1079	C-CERAMIC,CHIP
2203-007194	C1090	C-CERAMIC,CHIP
2703-002591	C1085	INDUCTOR-SMD
2703-004287	C1018	INDUCTOR-SMD
2703-005085	C1096	INDUCTOR-SMD
2910-000364	F1004	FILTER-SAW

Please consult the GSPN website (Samsung Portal) for the most recent version of the product's part list.